



No.	Name	Position
S1	Record/Play Switch	PLAY
S2	Power Switch	OFF
S3	Fast Switch	OFF

1010S Schematic